

Cloud CX462 Jumper Settings

Ref	Description	Default	Location	Notes
CX462				
J1	Mic 1 access bypass	ON	Rear Right: Main PCB	
J2	Mic 2 access bypass	ON	Rear Right: Main PCB	
J3	Mic 3 access bypass	ON	Rear Right: Main PCB	
J4	Mic 4 access bypass	ON	Rear Right: Main PCB	
J5	Mic 3 Phantom Power	OFF	Rear Right: Main PCB	
J6	Mic 4 Phantom Power	OFF	Rear Right: Main PCB	
J7	Force Analogue Control of Source	SW	Rear Right: Main PCB	
J8	Force analogue Control of Level	SW	Rear Right: Main PCB	
J9	Force Front Panel Control of Source	SW	Rear Right: Main PCB	
J10	Force Front Panel Control of Level	SW	Rear Right: Main PCB	
J11	Line 6 Priority enable (dual jumpers)	OFF	Mid Left: Main PCB	
J12	Line 6 Priority release	3s	Mid Left: Main PCB	
J13	Music Mute	NO	Rear Left: Main PCB	
J14	Music Outputs Mono Stereo	Stereo	Rear Right: Main PCB	
J15	Microphone over Music priority	POST	Front Right: Lower PCB	
J16	Mic 1 over music priority trigger	AVO	Front Mid: Main PCB	
J17	Mic 1 over mics priority trigger	AVO	Front Mid: Main PCB	
J18	Mic 1 Phantom Power	OFF	Rear Right: Mic PCB	
J19	Mic 2 Phantom Power.	OFF	Rear Right: Mic PCB	

CDI-S100

J1	Baud Rate	9600	Rear Left: CDI-S100 PCB	
J2	Baud Rate	9600	Rear Left: CDI-S100 PCB	
J3	Baud Rate	9600	Rear Left: CDI-S100 PCB	
J4	Control (RTS/CTS, XON/XOFF/NONE)	NONE	Rear Left: CDI-S100 PCB	
J5	Control (RTS/CTS, XON/XOFF/NONE)	NONE	Rear Left: CDI-S100 PCB	

General Notes:

All power to the unit must be removed before removing the top panel