

Cloud PM4-SA & PM8-SA Jumper Settings

Ref	Description	Default		Location	Notes
J1	Chime Enable	ON		Front right	
J2	Message Chime Enable	ON		Front right	
J3	Message Chime File Select	C_1.mp3*		Front right	
J4	Digital Paging Interface termination	ON		Front right	
J6	Internal Chime On/Off	ON		Mid	
J7	NVM Reset	OFF		Mid Block of 8	
J8	High Priority	OFF		Mid Block of 8	
J9	Lock Groups	OFF		Mid Block of 8	
J10	Auto-reset zone selection	ON		Mid Block of 8	
J11	Zone Offset; +8	OFF		Mid Block of 8	

All jumpers are located on the main PCB